



INSTALLATION INSTRUCTIONS

For use with:

HB4 Series LED High Bays

HB4-100X-X-B | HB4-150X-X-B
HB4-240X-X-B | HB4-300X-X-B

WHAT'S IN THE BOX

- HB4 LUMINAIRE
- HOOK AND EYEBOLT
- PRE-INSTALLED 10' WIRE

WHAT YOU'LL NEED

- CHAIN OR CABLE TO MECHANICALLY SUPPORT LUMINAIRE
- REFLECTOR (OPTIONAL ACCESSORY)

WARNING

- Ensure that the input voltage matches that of the luminaire.
- To avoid electrical shock or component damage, disconnect power before attempting installation or servicing.
- This product must be installed in accordance with the national electric code (NEC) and all applicable federal, state/provincial and local electric codes and safety standards.
- Any alteration or modification of this product is expressly forbidden as it may cause serious personal injury, death, property damage and/or product malfunction.
- To prevent product malfunction and/or electrical shock this product must be properly grounded.

IMPORTANT


Before assembling your fixture, please make sure that you carefully read through this instruction sheet. Ensure your fixture is installed by a qualified licensed electrician.

Note: The important safeguards and instructions that appear in this sheet are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution, and care are factors that cannot be built into any product. These factors must be supplied by the person(s) caring for and operating the fixture.


PREMISE LED Inc.
80-86 Carrier Drive
Toronto, ON Canada
M9W 5R1
PREMISELED.COM

TO INSTALL THE HIGH BAY

1. Use a wrench to tighten the nut on the integrated hook.

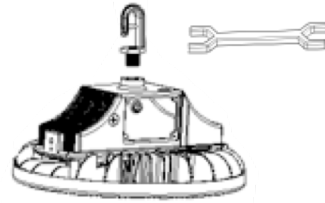


2. Hang the luminaire on the chain or cable that you are using and then tighten the hook's fastening screw with a screw driver.

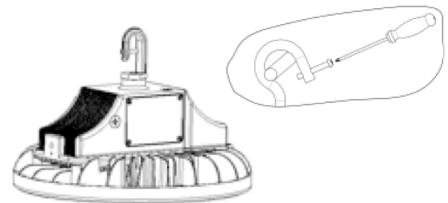

3. Using the pre-installed 10' wire, connect to the power supply:


- Black wire to line (hot)
- White wire to neutral (In the case of 208 or 240 line voltage, the 2nd hot leg will be connected to the white lead coming from the fixture.)
- Green wire to ground

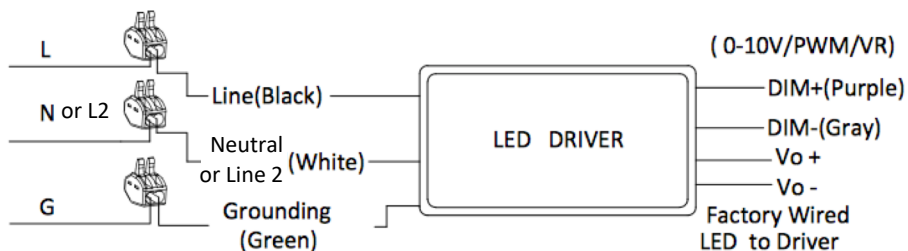

4. Turn on power to the fixture and test the luminaire.

TO INSTALL REFLECTORS

The HB4-Series High Bays can be installed with Aluminum Reflectors, Polycarbonate Prismatic Reflectors or Polycarbonate Prismatic Reflectors with Cone or Drop Lens attachments.

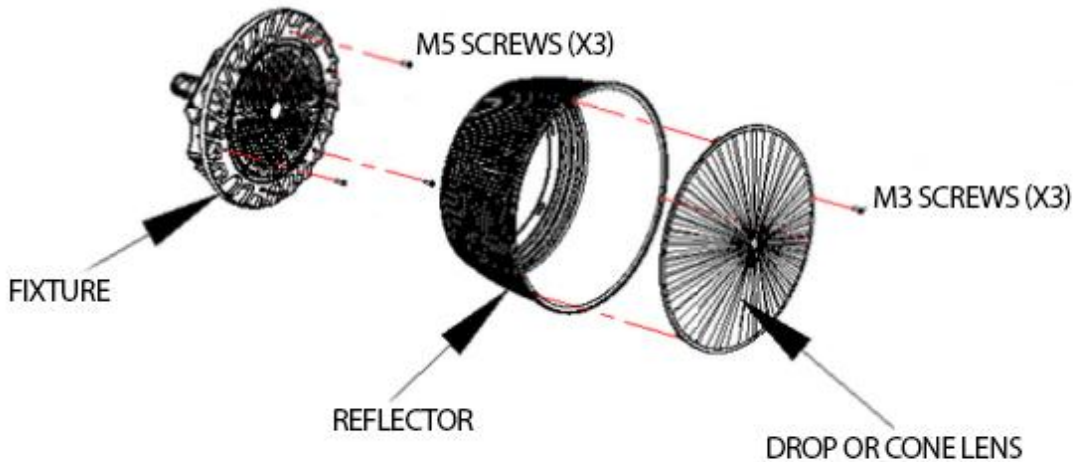

1. Remove the three silicone plugs from the bottom of the fixture.
2. Screw in the three provided M5 screws (do not screw in completely, leave 4mm of space to fit the reflector).
3. Align the holes of the reflector with the M5 screws, twist to lock in place, then tighten the M5 screws. Reflector install is now complete.
4. If a drop or cone lens is required (can only be used with a prismatic reflector), align the three screw holes of the lens with the reflector. Snap in the reflector and use the provided three M3 screws to tighten the lens onto the reflector. Lens install is now complete.

